



7. Use a gap template to position the first brackets of the next row 10 mm from the top of the cassette

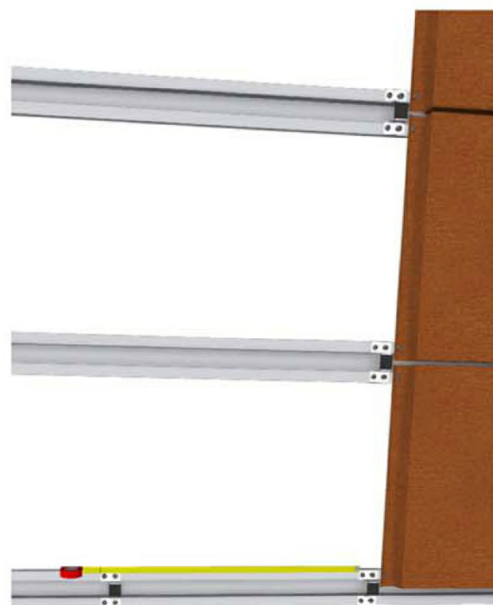

9. Continue installing the cassettes using gap templates in vertical joints and fastening the panels through the top flange

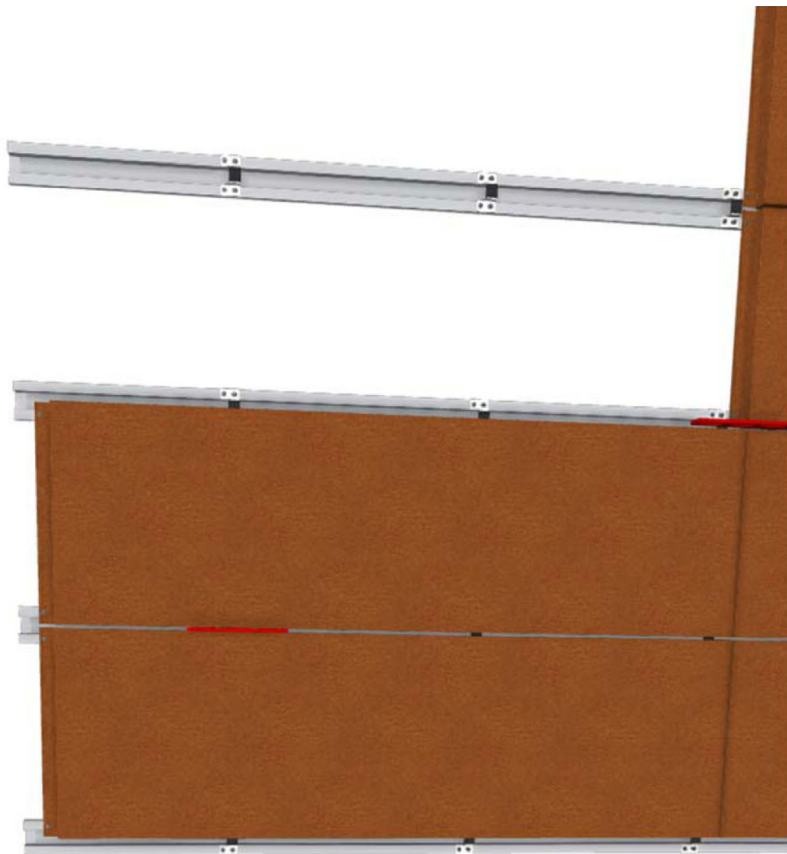

8.

- Use a tape measure to install the next row of brackets through oval holes with a span of 750 mm  
Use a level to double check and align the brackets